

# Signicade Deluxe A-Frame

## Product Parts


- 1 - Frame
- 2 - Tabs



## Display Set-Up and Sign Installation

### Step 1

Remove the display from the box and place it on a clean flat surface. Extend the hinged a-frame until the unit stands on its own.

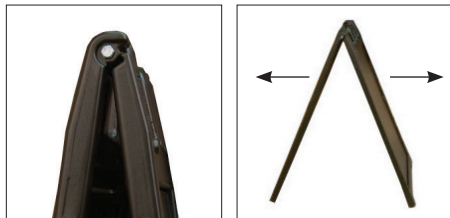

### Step 3

Lift your graphic upwards until it fully passes into the open slot behind the top recessed edge of the display and the bottom edge of the graphic can easily enter into the lower bevelled slot.



### Step 2

Slide your first graphic into the recessed area of the display and under the two Tabs (2) located on the vertical edges. Allow the graphic to extend below the top edge of the recessed area until the top of the graphic fully enters the recessed area.



### Step 4

Once your graphic is secured rotate your display and repeat the previous steps to secure your second graphic and the Signicade Deluxe A-Frame is ready to display.

\*For best writing results on chalkboard graphics, use a liquid chalk marker or soft chalk pastels



To add water or sand, simply pull the plugs located on the sides of the display, fill, and replace plugs.

\*\* Note: Water not recommended in below freezing temperatures.

## Storage

Store in a cool dry location.

## Care

To clean, wipe with damp cloth.